

## Gas Log Procedures

<b>Read the Manufacturer's Operating Manual</b>	<ul style="list-style-type: none"> <li><del>✍</del> Read the Manufacturer's Operating Manual carefully, including the safety recommendations and lighting instructions.</li> </ul>
<b>Locate Emergency Shutoff Valve, Main Valve, and the Pilot Assembly</b>	<ul style="list-style-type: none"> <li><del>✍</del> The Emergency Shutoff Valve is usually located outside of the fireplace firebox in the floor or the wall.</li> <li><del>✍</del> The Main Valve is located next to the logs – usually on the right side.</li> <li><del>✍</del> The Pilot Assembly is located under the logs and grate, usually on the right side of the burner pan.</li> </ul>
<b>Before Lighting</b>	<ul style="list-style-type: none"> <li><del>✍</del> Before lighting, smell all around the gas logs for gas. If you smell gas, do not attempt to light the gas logs and call your gas supplier immediately.</li> </ul>
<b>To Light the Pilot Flame</b>	<ul style="list-style-type: none"> <li><del>✍</del> Make sure the Emergency Shutoff Valve is open – brass key turned all the way counter-clockwise.</li> <li><del>✍</del> Turn the knob on the Main Valve all the way counter-clockwise until it stops. The Main Valve may already be in the counter-clockwise position.</li> <li><del>✍</del> Turn the Main Valve back clockwise until it stops – this is the pilot position.</li> <li><del>✍</del> Push in on the Main Valve and hold that position – this sends gas to the pilot only.</li> <li><del>✍</del> While still pushing in on the Main Valve, light the pilot with a long match or butane lighter. After pilot has ignited, continue to hold in Main Valve for 20 to 30 seconds.</li> <li><del>✍</del> Let go of the Main Valve. If the pilot remains on, you have successfully started your pilot. If not, repeat process.</li> </ul>
<b>To Turn Pilot Flame Off</b>	<ul style="list-style-type: none"> <li><del>✍</del> From the pilot position, depress the Main Valve slightly and continue to turn clockwise until it stops. Pilot and main burner are now off.</li> </ul>
<b>To Turn on Manual Burner</b>	<ul style="list-style-type: none"> <li><del>✍</del> Turn the Main Valve counter-clockwise.</li> </ul>
<b>To Turn on Remote Ready Burner</b>	<ul style="list-style-type: none"> <li><del>✍</del> Turn the Main Valve all the way counter-clockwise and turn on with switch or remote.</li> </ul>

**WARNING:** These procedures will work with most gas log sets. However, you should always consult your manufacturer's operating manual first. If you do not follow these and/or your manufacturer's operating instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.